

# Smoke Detector



 
## GENERAL INFORMATION

The Smoke Detector can be placed up to 800 feet away from the tattletale base unit depending on structures and objects in-between the sensor and the tattletale.

The Smoke Detector uses photoelectric technology to detect smoke (not heat) and it continually monitors its own sensitivity and operational status. It will operate at temperatures between 32F and 120F. The 3V CR123A Lithium Battery will typically last one year.

## Mounting Instructions

Use the provided screws to attach the Smoke Detector to the ceiling. The best location for the Smoke Detector is at a high point where smoke will accumulate. In rooms with sloped ceilings, install Smoke Detector 3 ft from the highest point of the ceiling. Tops of peaked ceilings, or places where the ceiling meets the wall can create dead air spaces that prevent smoke from reaching the sensor. Do not mount Smoke Detectors near air conditioners, heaters, fans, or any other devices with air intakes/returns, as they can drive smoke away from Smoke Detectors.

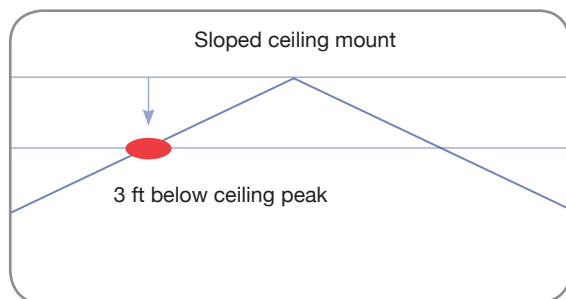

## General Troubleshooting

**BEFORE TROUBLESHOOTING CALL 1-888-835-5668 OR US TEST DRIVE FUNCTION ON THE EDGE MOBILE APP TO PUT YOUR ACCOUNT ON TEST.**

When there is an issue with your Smoke Detector the tattletale™ base unit will display a message on its screen which says either **“Sensor Open”** or **“Other Issues.”** If you see either of these messages displayed, press 3 on the keypad, then enter your 4-digit PIN to get more information about what is going on with the sensor.

- ▶ If the Smoke Detector’s status is **“LOST,”** verify that it is within range of the tattletale base unit and that the sensor has working batteries installed.
- ▶ If the Smoke Detector’s status is **“LOW BATTERY,”** replace the CR123A battery.
- ▶ If the Smoke Detector’s status is **“OPEN”** and there is no smoke in its area, remove the battery, clean out the Smoke Detector using canned air, and wait at least 20 seconds before putting the battery back in.

For instructions on testing and changing the battery, see reverse page. ▶



# Smoke Detector (continued)

## Follow these steps to change the battery:

1. Call 1-888-835-5668 to put your account on test or use the Test Drive function on the EDGE mobile app to avoid accidental dispatch of the Fire Department.
2. Remove the Smoke Detector from its back plate by turning it counterclockwise one quarter turn (Fig.1).
3. Remove the old CR123A battery. WAIT AT LEAST 20 SECONDS BEFORE INSTALLING NEW BATTERY.
4. Install new CR123A battery.
5. To reassemble the Smoke Detector, line up the alignment notches on the outer edges of the Smoke Detector and the back plate as pictured. Turn the Smoke Detector clockwise to secure it to the back plate.
6. Mount the sensor, then call 1-888-835-5668 or use the Test Drive function on the EDGE mobile app to take your account off of test.

Fig. 1 Smoke detector with back plate removed

