

Double Button fixed pendant



GENERAL INFORMATION

Double-button, fixed position pendant transmitter, but comes as a fixed-position hold up transmitter with back tamper. LED flashes on all transmissions, including supervision, so the user is reassured the unit is operating. It features a rugged, double-button design to help prevent false alarms, and a back tamper for tamper protection.

Key Features

- ▶ Double-button design helps prevent false alarms
- ▶ Includes back tamper for secure fixed position alarm signaling
- ▶ LED flashes with all transmissions, ensuring operation at a glance
- ▶ UL listed
- ▶ Can be configured to generate one of the following alarm types:
 - Police panic
 - Silent panic
 - Medical panic
 - Fire panic
 - Assistance required
 - Active aggressor

Mounting Instruction

The Fixed Panic Pendant must be mounted to operate correctly. If not mounted, it will remain in a tamper state.

Caution: For UL installations, mount the pendant in a concealed area, where its operation cannot be viewed from a public space.

To mount the pendant:

- 1.** Insert a small flathead screwdriver in the slot on the bottom of the pendant and gently pry to release the back plate.
- 2.** Use the included hardware to mount the back plate of the transmitter housing to the mounting surface.
- 3.** Hook the bottom of the transmitter into the back plate, then clip the top into place.

Caution: The tamper spring must make contact with the mounting surface through the slot in the back plate. Make sure to first hook the bottom of the transmitter into the back plate and then clip the top into place to ensure the tamper spring makes contact.



Double Button fixed pendant (continued)

TO PREVENT AN ACCIDENTAL ALARM, PLACE YOUR ACCOUNT ON TEST BY CALLING 1-888-835-5668 OR USE THE TEST DRIVE FUNCTION ON THE EDGE MOBILE APP TO PUT YOUR ACCOUNT ON TEST.

Follow these steps to change the battery:

1. Insert a small flathead screwdriver in the slot on the bottom of the Double Button fixed pendant.
2. Remove the battery and replace with a new CR2 3V battery. Be sure to orient the battery so that the positive (+) and negative (-) ends of the battery line up with the markings on the inside of the battery housing. Placing the battery in backwards will destroy the Double Button fixed pendant, so be very careful to insert.
3. Press the BLACK rest button, located on the right hand side of the Double Button fixed pendant (fig.1). Reassemble the Double Button fixed pendant and test.

Fig. 1

Double Button fixed pendant with case open

