

 
Fire Pull Down Station with siren



GENERAL INFORMATION

The pull down fire alarm station has a die-cast aluminum-alloy housing and meets ADA pull requirements. The Fire Pull Down Station has a piezo siren so when the front cover is opened, it notifies people in the surrounding area. It's wireless and easy to install, the transmitter battery (3V CR123A) and siren battery (9V Alkaline) will typically last for 1-2 years.

Mounting Instructions

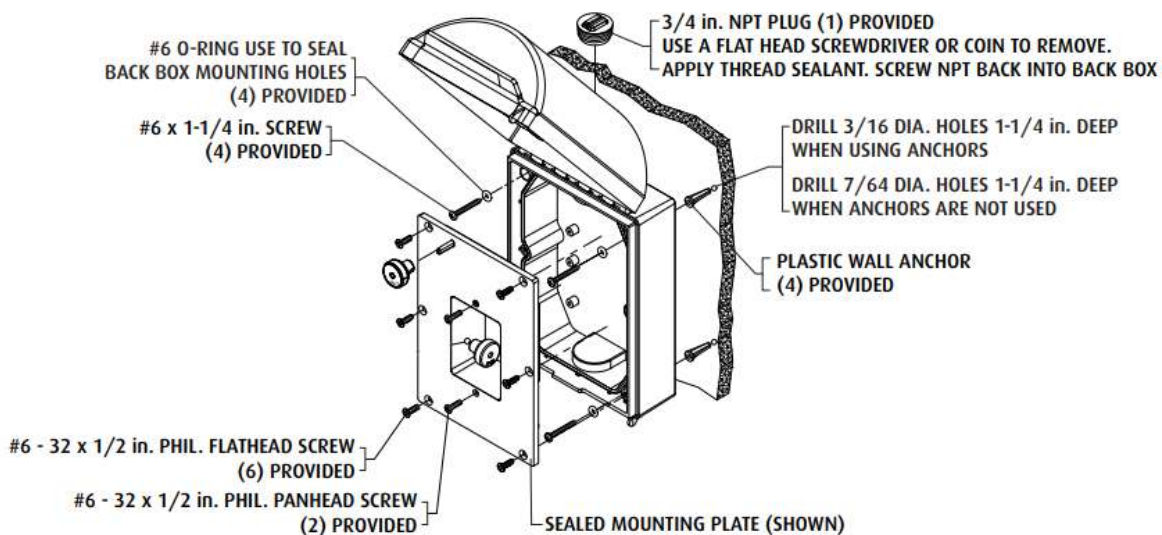

For instructions on changing the battery and testing, see reverse page. ▶

Fire Pull Down Station with siren (continued)

General Troubleshooting

When there is an issue with your Emergency Lock Down Station, the tattletale base unit will display a message on its screen which says either **“Sensor Open”** or **“Other Issues.”** If you see either of these messages displayed, press 3 on the keypad, then enter your 4-digit PIN to get more information about what is going on with the sensor.

If the Emergency Lock Down Station’s status is **“LOST,”** verify that it is within range of the tattletale base unit and that the sensor has a working battery in the transmitter. This may require a signal booster.

If the Emergency Lock Down Station’s status is **“LOW BATTERY,”** replace the CR123A battery

Testing the Fire Pull Down Station

1. Place the system on test by either calling 888-TELL-ON-U or use the Test Drive Function on the Mobile App.
2. Open the front cover and press the button.
3. Close the front cover and enter your four digit PIN to disarm the system.

Follow these steps to change the battery:

1. To access the battery, first lift the clear guard to gain access to the 6 screws shown in (Fig.1)
2. Remove all 6 screws and remove sealed mounting plate from the housing.
3. Locate and replace the CR123A 3V battery. (Fig.2), Be sure to orient the battery so that the positive (+) and negative (-) ends of the battery line up with the markings next to the battery housing.
4. Press the BLACK reset button (Fig.2), Reassemble the sensor test the Lock down station.

Fig. 1: Lock down station with clear guard opened


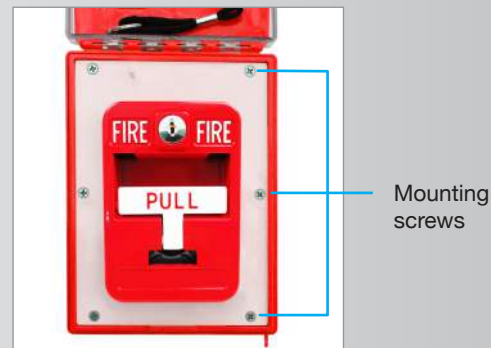 


Fig. 2: Fire Pull Down Station with mounting plate removed

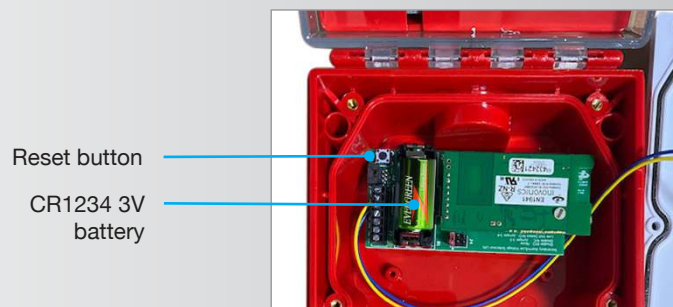 

Fire Pull Down Station with siren (continued)

Service pin operation:

1. Inserting the service pin in the back of the siren case allows the enclosure case to be opened without the siren sounding
2. Remember to remove the service pin before returning the case to service to assure normal siren operation

Follow these steps to change the enclosure siren battery:

1. To access the battery, remove the two screws from the horn case cover (Fig.1)
2. Remove the siren cover from the siren case. (Fig.2)
3. Locate and replace the 9V battery. (Fig.3)
4. Replace case cover and reinstall cover (Fig.2)

Adjust siren volume:

1. Locate volume switch in opened siren case and choose between the Hi volume and low volume

Fig. 1: Siren box located at the top of the case

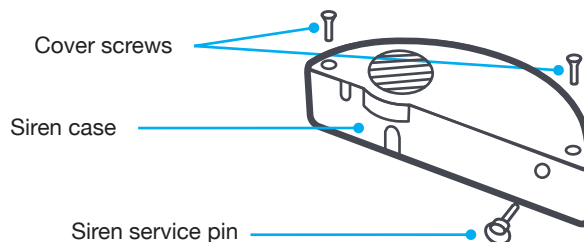 


Fig. 2: Siren case with case cover removed

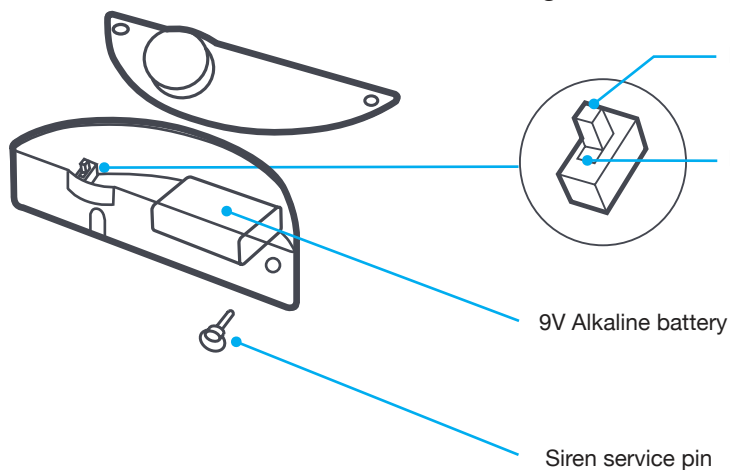 


Fig. 3: Volume control detail

